MARUICH user's guide

Thank you for purchasing a Maruichi Sailing product.

This user's guide provides information on

"changes with age", "precautions for use",

"maintenance methods", and "after-sales service"

in order to use this product safely and correctly.

Please take care to read this guide before use.

Request for product confirmation immediately after delivery

- Immediately after delivery, please be sure to check the number of products, specifications, sizes, scratches, damage, etc.
- If you have any concerns, please contact the retailer as soon as possible within 8 days after delivery.
- Please note that after 9 days from delivery, the product may be handled for a fee.

"Secular change" is the change in quality and performance caused by the passage of time (months and days).

We take great care in designing, material selection, structural design, etc., in order to minimize product aging, but please understand in advance that the following aging may occur.

For sofa

- With the frequency of use, the hardness of the back cushion and seat surface will gradually soften from the time of purchase.
- * When sitting on the sofa, we recommend that you use the entire seat evenly, rather than sitting in one place to avoid extreme deformation or changes in hardness.
- Surface fabrics of sofas, whether made of cloth, synthetic leather, or natural leather, may stretch and wrinkle even when not present at the time of purchase.
- If exposed to direct sunlight or strong lighting (such as spotlights) for a length of time, the upholstery surface may lose color.

For sofa with reclining function

• Depending on how often you use the recline function, the movement may become less dampened than when you purchased it.

For wooden products (tables, etc.)

- Since wooden products are natural materials, changes such as warping, cracking, and thinning may occur depending on the environment.
- * In particular, please be aware that changes in indoor temperature and humidity, extreme moisture penetration during use, direct sunlight and direct wind blowing from the air conditioner vent, etc. are the biggest change factors.

About "Secular change"

Precautions for use

Incorrect use may lead to personal injury or damage the floor or other objects, so be sure to follow the instructions below.

General information about sofas and chairs



















Do not stand, jump, or sit on the seat, elbows, or backrest. Also, do not use it for purposes other than sitting. There is a risk of tipping over, injury or damage.

Do not tilt the chair while sitting. There is a risk of tipping over, injury or damage.

Do not subject the product to strong impact. There is a risk of injury or damage.

Do not put anything on the armrest, seat or backrest. There is a risk of injury due to falling or falling, and damage to the floor surface.

Do not sit on bare skin, especially when wet. It may cause molding and dirt.

Do not allow infants to use the product alone. There is a risk of injury or damage.







Do not pull on the cushions (elbows, seat, backrest) that are fixed to the main unit. It may cause fraying or damage. Be especially careful when moving the product.

When moving the product, be sure to put your hands under the seat, and lift and carry it with two or more adults so that it does not drag on the floor. This will prevent injuries and scratches on the floor.

Legs, screws, and metal fittings may loosen due to repeated seating impacts. Regularly check for looseness or wobble, and retighten if loose. Using it while it is loose may result in injury or damage.

About caster sofas and chairs



Refrain from moving it violently or pushing it while sitting on the chair. There is a risk of injury or damage to other objects.





Placing furniture on a rug for easily damaged floors, such as flooring and tatami mats. It will prevent scratches on the floor.

Occasionally check casters for looseness and wobble. This will prevent injury and damage.

03

About swivel chairs







Do not put your fingers in the rotating metal fittings or in the gap between the chair and the chair. Fingers may be pinched and injured.

Do not place items into the rotating metal fittings to stop the rotation. There is a risk of injury or damage to metal fittings.

Sit in the center of the chair to use it. Also, please do not play with it by swinging it back and forth or rotating it more than necessary. There is a risk of injury or damage to metal fittings.



Occasionally check the rotating metal fittings for looseness and wobble. This will prevent injury and damage.

About sofas with reclining function



When the product arrives for the first time please note: vibration from the transportation process or if any excessive shock is applied when returning the back during use, in this rare case the metal fittings may be locked, and reclining may not be possible. In that case, pull the back forcefully from the rear back position. Unlock and return to normal use.





 








Do not insert your fingers into the reclining bracket, backrest, or gaps between the seats. There is a risk of injury due to pinching.

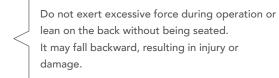

Always check your surroundings when operating. There is a risk of injury or damage to the product due to contact.

Please note that the degree to which the reclining chair lowers and the degree to which the stopper works will vary depending on the conditions of use, the frequency of use, and the seat.

Occasionally check the reclining bracket for any distortion or wobble. This will prevent injury and damage.

The reclining fittings may make a frictional noise during use. In that case, apply commercially available lubricating oil (silicon spray) to the back and seat bolt joints.

Lubrication procedure Page 08

Regarding the backrest fall prevention adjustment function

There is an adjustment screw on the right side (circled part in the right figure) under each seat.

This adjustment screw prevents the backrest from collapsing naturally when the person is not seated. Use this adjustment screw if the backrest naturally falls backward when standing up from the sofa or if the position of the backrest shifts due to its own weight.

 
If adjustment is necessary, the screw can be tightened by hand without using tools.

Caution


- * Do not over-tighten, over-loosen, or remove the adjustment screws. It may stop working or be damaged.
- * Do not use this adjustment screw as a stopper as its purpose is not to lock the recline motion.

How to return the seat when it comes off

(1)Please check the positions of the slide brackets that came off.

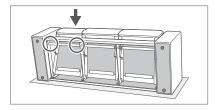


 (3)After aligning the position, press down with both hands from the top of the seat.

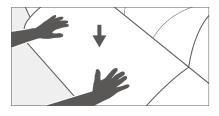


(2)Align the left and right slide fittings so that they are directly above the shaft.

 Adiustment screv

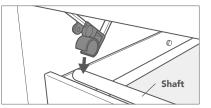


(4)Make sure that the slide bracket is firmly attached to the shaft.

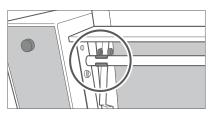


Lubrication procedure

 - Two or more people are recommended to work together.
- To protect the floor surface, place a rug under the legs when working.
- (1)Slowly push the sofa backwards (toward the backrest).

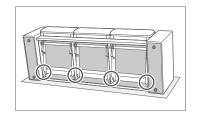


(2)Peel off the upholstery on the circled area in(1) to expose the joints of the steel frame.

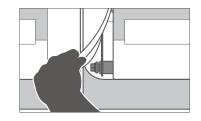

(3)Apply lubricating oil 3 to 4 times to the narrow gaps between the joints of the steel frame. At this time, it would be convenient to use a straw that can be attached to the lubricating oil nozzle.

* Lubricating oil (silicon spray) can be used for plastics and metals, but we recommend non-tacky lubricants.

 (4)After applying, return the upholstery to its original position and raise the sofa. Then, repeat the recline motion 2-3 times to allow the lubricating oil to blend into the frame.

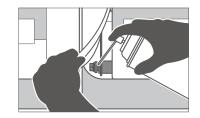



- If the noise is still produced even after the lubricating oil has been applied to the frame, repeat steps (1) thru (4) again.
- If there is no sound, it is complete, but if you still hear sound, please contact your dealer.

 
07

About upholstered sofas and chairs







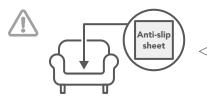





When removing the cover of a product that uses a covering, do not pull it forcibly. There is a risk of injury or damage.

Do not use products that use a cover ring with the cover removed.


Please maintain the covering of products according to the washing instructions.

For products that use a cover ring, the cover may slip during use. If the shift is severe, we recommend using a commercially available non-slip sheet between the cover and the main unit.

All of our covered sofas can have their covers replaced. However, please note that if the same fabric as the sofa you have is out of production, you will have to choose from available fabrics.


If the product is to be used in an environment where small children can easily get dirt or sweat on it, we recommend that you apply a water-repellent treatment at a cleaning shop in advance or use a commercially available water-repellent spray.

* When using a commercially available water repellent spray, please read the instructions carefully and try it in an inconspicuous place before using. Soft leather (synthetic leather) sofas and chairs

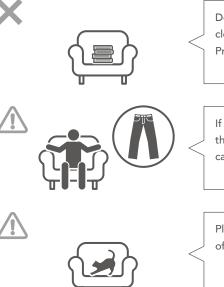

Do not leave newspapers, magazines, patterned clothing, etc. on the sofa or chair for a long time. Prints may transfer onto the upholstery.

 If you sit while wearing clothes such as dark jeans, the color may transfer to the upholstery, so be careful.

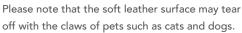

• If it gets dirty, please clean it according to "How to care for soft leather" on page 19. Avoid using special chemicals, as they may damage the surface.


About genuine leather sofas and chairs

• Features of leather

In general, leather has excellent heat retention and moisture absorption. It is a very durable material that does not change its texture depending on the temperature. New leather products have a unique smell and initially, a hard texture. However with use, the smell will diminish, the leather will soften, and it will gain in tastefulness and appeal. Additionally, advances in leather tanning technology have resulted in a wide variety of textures and colors, and it is now used in a variety of products, from sofas and clothing to stationery goods.

However, because it is a natural material, depending on how it is finished, there may contain irregularities such as scars (thorns, scratches, insect bites), wrinkles which are natural marks, and "tigers" (large streaks on the surface), blood streaks (marks where blood vessels passed just under the skin). Some leathers have variations in coloring (uneven dyeing due to the density and subtle thickness of the leather). Leather, like trees in nature, has its own unique grain pattern. Please understand that these marks are proof that cows have lived in nature and are "marks unique to natural materials."

* If you put an additional cover on a leather-surfaced sofa, you may hear a rubbing sound between the layers (leather and synthetic leather).

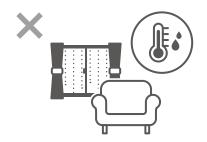



Leather is a moisture sensitive material. High humidity can cause mold and discoloration, and dryness can cause cracks and broken seams, so avoid using in extremely humid or dry locations.

Do not allow light-colored objects to come in contact with the product, or use the product with wet clothing. Please note that the color may fade due to friction or color transfer due to moisture.

Claws of cats and dogs may damage the surface.



Since leather is a natural material, it may contain marks, wrinkles, patterns, and shades of color from the natural life cycle of the animal.

• If it gets dirty, please clean it according to "How to care for leather upholstery" on page 20.

About sofas with storage, boxes, and tables



Do not climb on drawers or pulls, hang on doors, or pull with excessive force. There is a risk of injury or damage.



Do not open or pull out multiple doors or drawers at the same time. The center of gravity may shift forward and the product may tip over, resulting in injury or damage.



For furniture with doors, check the range of

When pulling out the drawer fully, please pull it out carefully. There is a risk of falling off, injury or

damage.

movement before opening and closing the door so that it does not hit objects or people. There is a risk of injury or damage to the door.

For removable shelves, be sure to attach the shelf brackets securely. It may fall off and cause injury or damage.



Placing a heavy object on the box or table for a long time, or putting a person on it may cause injury or damage.



Placing hot objects directly on a box or table, leaving wet objects, applying tape, or covering with vinyl may cause the paint to discolor or peel off.

Placing or dragging ashtrays or tableware with rough bottoms directly on boxes or tables may

Do not place the box or table on its side, or lean it against a wall. There is a risk of injury or

cause scratches.

damage due to falling over.








Products that use glass may be damaged by rough handling and cause injury.

Other notes

 


Do not use the product under direct sunlight, spotlights, or other strong light sources, or in places with high temperatures and humidity, such as near a stove, directly under the vent of an air conditioner, or exterior. Light or heat may cause fire, discoloration or deformation of the product, or may cause mold.

 
For products with movable headrests, do not step on them or apply excessive force. There is a risk of injury or damage.

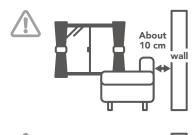



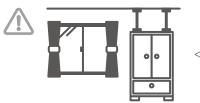



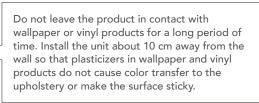

In a room with high temperature and high humidity, mold and mites may grow due to stagnant air, which may be harmful to your health. Install the unit about 10 cm away from the wall so that air can flow behind the furniture, and ventilate the room sufficiently.

The furniture may fall down in an earthquake, etc., and you may be injured. Also, if you place objects on top of the furniture, they may fall and cause injury, so please be careful when placing them.

Some of our products can be disassembled so that they can be easily carried in and out of narrow rooms. Details vary depending on the product, so please follow the instruction manual for each product.

When moving products that are assembled or connected together, be sure to separate each part before moving. Also, do not move the product by dragging it on the floor. It may cause damage to the assembly, and connecting parts, or scratch the floor.

Place the furniture horizontally. Using the product in an unstable location may cause the product to warp, break, or cause injury.

Only products with an adjuster can adjust the unevenness of the floor within the possible range and stabilize it.























When using furniture on a floor that is easily damaged, such as flooring, please use a rug or attach felt to the bottom of the legs to prevent the floor from being scratched.

 
Please be careful when using furniture on a long pile carpet as it may cause damage to the carpet.

 
Please note that movable metal fittings such as the headrest and sliding metal fittings may become loose after long-term use.

Please note that the urethane foam, springs, cotton, and feathers used in the chairs change over time.

When the cushion is used, the cover and contents may shift and the cover may be wrinkled or deformed. Please adjust the shape of the cushion accordingly before using it.

Dry feather cushions frequently in a well-ventilated area. In addition, the contents may be uneven, so we recommend that you adjust the shape by loosening the cushions on a regular basis. The shrunken feathers and their elasticity will then be restored.

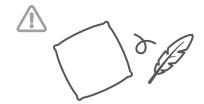

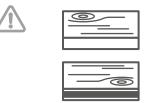

Feather cushions are made with fabric that prevents the feathers from penetrating out, but please note that the feathers may come out from the seams.

There are two types of surface materials for wooden products: solid wood and veneer. Please note that these are all natural materials, so the color and wood grain may vary slightly depending on the product.

Wood products (solid wood) are sensitive to extreme dryness and changes in moisture. The surface may warp or crack if exposed to hot or cold air such as a stove or air conditioner, so please use it in an environment where the room temperature is stable.

We use highly durable springs, urethane foam, cotton, cushioning materials, etc., but depending on the frequency and conditions of use, the cushioning performance may decrease or the surface upholstery may wrinkle.

In order to maintain its comfort over time, we recommend that you repair it or replace the contents when aging becomes conspicuous.

For details, please contact your dealer.

Maintenance methods

We recommend that the following maintenance be performed to ensure long and comfortable use.

Fabric care

- Use an etiquette brush to lightly brush everyday dirt such as dust and dirt.
- If it gets dirty, it will become difficult to remove over time, so please wipe it off immediately. However, please use a vacuum cleaner to remove powdery dirt such as cigarette ash.
- For simple stains, dilute neutral detergent 1:10 with lukewarm water (about 30 to 40 degrees Celsius), soak it in a cloth, and pat it gently to remove it. After removing the dirt, please wipe with a damp cloth in the same way until no trace of the detergent remains.
- If you spill something that will stain, use a tissue paper or dry cloth as a first aid measure to remove it. After that, lightly dab the surface with a damp cloth.
- Depending on the type of dirt, please refer to the cleaning methods below.

Dirt type	Cotton	Polyester	Acrylic
Coffee Tea	(1)Wipe and dab with a wet towel.(2)Wipe and dab with a diluted neutral detergent.	(1)Wipe and dab with a wet towel.(2)Wipe and dab with a diluted neutral detergent or weakly alkaline detergent.	
Milk Egg	(1)Dabbing with a damp towel rinsed in water.(2)Dabbing with benzene and wipe off with ammonia water.		
Foundation Lipstick Blush	(1)Dabbing with a cloth soaked in benzine.(2)Rub with a diluted warm neutral detergent solution.	(1)Dabbing with a cloth soaked in benzene.(2)Rub with diluted warm neutral detergent or weakly alkaline detergent.	
Magic ink	 (1)Dabbing with a cloth soaked in benzene. (2)Apply oxygen bleach to the toothbrush and dab it. Note: Off-White is not possible. (1)Dabbing with a cloth soaked in benzene. (2)Apply oxygen bleach to the toothbrush and dab it. 		
Ballpoint pen	(1)Rub with undiluted alcohol. (2)Knead with a solution diluted 1:10 ratio with a neutral detergent.	th a solution (2)Rub with a 1:10 ratio diluted solution of neutral detergent or 10 ratio with a weakly alkaline detergent.	

Please note

- When removing stains, be careful not to damage the fabric by rubbing or pressing too hard.
- When drying, do so slowly away from sunlight. Please note that exposure to sunlight or rapid drying may cause the material to harden or discolor.
- Please note that if you use detergent, etc., the color may change over time if traces of the detergent's ingredients remains
- Expected results may not always be obtained depending on the cleaning method, degree of dirt, passage of time, color, etc. Be especially careful with cotton materials as stains are difficult to remove.
- Oil-based marker inks, special chemicals, and stains that are deeply soaked and fixed may be difficult to remove and stains may remain.
- Dark colored cotton materials may lose color during cleaning.

Precautions regarding washing the cover

Washable covers differ in washing method (hand wash or washing machine) depending on the fabric and specifications. Please check this manual before washing.

Before you start washing!

Be sure to check the care

instructions attached to the co



ver.	Wash gently by hand at a maximum temperature of 40°C. Do not use a washing machine.	It is m limit is washir soft w the "h
	· · · · · · · · · · · · · · · · · · ·	
	from boowily opilod properin	

achine washable, but the 40°C. If machine ng, limit the setting to a ashing setting similar to andwashing setting."

- It is recommended to remove stains from heavily soiled areas in advance.
- Please check the care instructions prior to washing any fabric. Depending on the cover's specification, it may not be washable.

For example ...

Covers made of quilted fabric such as cotton or urethane.

Covers sewn with materials that cannot be washed with water, such as genuine leather or special materials. When there is a risk of excessive damage to the surface of the fabric, such as with zippers.

Placing in the washing machine

- Roughly fold the item so that the dirty part faces out and put it in the washing machine.
- Do not wash with other laundry such as clothes. There is a risk of discoloration or damage.
- Items that tend to get lint (such as protruding parts of Velcro tape) should always be placed inside the cover when washing.
 - Caution Washing strongly with the protrusions such as Velcro on the outside may damage the surface of the fabric. Be sure to wash it using a cycle similar to a mild hand wash with the protrusions on the inside of the cover in contact with the back side of the cover.
- In order to prevent unevenness in the washing tub, please put it evenly in the tub.
- Refrain from putting too much laundry into the washing machine, such as covers, as it will cause uneven washing and damage to the washing machine.

Drying method

- Never dry in a dryer (tumble dry). The cover may shrink, lose its shape, or be damaged.
- One of the causes of color fading is sunburn and fading due to direct sunlight. After washing the cover, please dry it in the shade.
- When drying in the shade, adjust the shape to some extent and hang it dry. You can dry it more effectively by patting it with the palms of your hands to smooth out wrinkles.

Others

- When using a washing machine, conditions vary depending on the amount, type of washing machine, washing cycle, etc., so be sure to follow the instructions in the instruction manual for vour washing machine.
- When using detergents, fabric softeners, etc., follow the manufacturer's directions and instructions for the washing machine and detergent.

Caring for soft leather (synthetic leather)

- Wipe clean with a soft, clean cloth about 2-3 times a year.
- If there is light dirt, wipe it off with a damp cloth rinsed in water or lukewarm water (about 30 to 40°C), and then wipe it with a dry cloth.
- If the stain is severe, dilute the neutral detergent 1:5 ratio or more with lukewarm water (about 30 to 40°C), apply it to the cloth, wring it out, and wipe the stain carefully. After removing the dirt, wipe with another cloth with a cloth dampened in water so that the ingredients of the detergent do not remain, and then wipe with a dry cloth so that no moisture remains.
- Depending on the type of dirt, please refer to the cleaning methods below.

Dirt type	Method
Coffee Tea	Soak a white cloth in lukewarm water or a neutral detergent and lightly rub it off. If any traces of dirt remain, soak a white cloth in benzene and rub off the traces of dirt. After that, gently wipe it with a cloth dampened with lukewarm water. However, light colors tend to leave traces of dirt.
Ballpoint pen	Soak a white cloth in benzene and rub off any traces of dirt. After that, gently wipe it with a cloth dampened with lukewarm water. However, it tends to leave stain marks.
Vinegar, Soy sauce, Sauce, Ketchup, Mayonnaise	Soak a white cloth in warm water or a mild detergent and rub it off.
Whiskey	Soak a white cloth in warm water or a mild detergent and rub it off. However, light colors tend to leave traces of dirt.
Hair tonic	Immediately after contamination, soak a white cloth in lukewarm water or neutral detergent and rub off the dirt.
Hair liquid	Soak a white cloth in warm water or a mild detergent and rub it off.
Chewing gum	Soak a white cloth in benzene and rub off any traces of dirt. After that, gently wipe it with a cloth dampened with lukewarm water.
General stains such as finger marks	Soak a white cloth in warm water or a mild detergent and rub it off. For light colors, if there are traces of dirt left, soak a white cloth in benzene and rub off the traces of dirt. After that, gently wipe it with a cloth dampened with lukewarm water.

Please note

- When removing dirt, be careful not to rub too hard and damage the surface of the soft leather.
- When drying, dry slowly in the shade. Please note that exposure to sunlight or rapid drying may cause the material to harden or discolor.
- If using detergent, we recommend testing in an inconspicuous area as it may cause discoloration. Also, if the ingredients remain attached after use, the material may harden or discolor easily, so please be careful to remove all chemical residues.
- Avoid using cleaners that contain wax, solvents (alcohol, thinner), chemical rags, etc., as they may impair the luster of the surface and cause surface deterioration (surface peeling).
- Expected results may not always be obtained depending on the degree of dirt, the passage of time, the color of the leather, etc.
- Wipe off any "moisture containing sweat" on the surface of soft leather (same as natural leather). Remaining moisture may cause surface deterioration.

Leather care

- For daily maintenance, lightly dust off the surface and wipe with a soft, dry cloth.
- If it gets wet, dab it with a dry towel to remove moisture, reshape it in a well-ventilated place, and dry it in the shade. Wet leather is vulnerable to heat, so never dry it with a high temperature dryer.

When semi-wet leather dries, it may partially harden due to natural oil depletion. In that case, we recommend using commercially available leather treatment.

- When storing for a long period of time, lightly dust the surface on a sunny day and dry it in the shade to prevent mold. In addition, if sweat or dirt contacts the material, it is recommended to wipe it with a damp towel and dry it in the shade.
- For long-term storage, store in a well-ventilated place away from direct sunlight, avoiding high temperatures and humidity. Also, do not put it in a tightly sealed plastic bag.
- Depending on the type of dirt, please refer to the cleaning methods below.

Dirt type	Method
Coffee Tea	Wipe gently with a soft white cloth moistened with water until the dirt is removed. In the case of liquids with a high salt content (soup, etc.), salt crystals may appear after drying, so please wipe them off carefully. We recommend using commercially available leather treatment after drying.
Oily items (Salad oil, etc.)	Wipe off with a soft white cloth moistened with a very thin neutral detergent solution (approximately 1% to 3%). Afterwards, wipe with a damp cloth to remove any detergent residue. We recommend using commercially available leather treatment after drying.
Ballpoint pen Crayon	Lightly rub with a soft eraser to remove dirt. If it still remains, lightly wipe it off with household stain remover benzene. Be careful not to rub too hard as it may damage the surface.
Fingerprints Sweat	If the leather is heavily soiled with finger marks or sweat, use a commercially available leather cleaner. In that case, please read the instructions carefully and test in an inconspicuous area before using.

Please note

- When using commercially available leather cleaners or leather creams, read the instructions carefully and test in an inconspicuous area before using. Please note that some types of leather finishes may stain.
- Be careful not to use too much leather cleaner or leather cream as it may darken or fade the color.
- Avoid direct contact with mothballs such as naphthalene, as it may cause discoloration or peeling of the surface.
- Do not use thinners, acidic or strong alkaline detergents, shoe creams or car waxes. It may cause discoloration, deterioration, or damage to the surface.

Caring for wood surface materials

• For daily care, wipe with a dry soft cloth.

• If it gets dirty, dilute a weak (3-5%) neutral detergent in lukewarm water (about 30-40°C), soak it in a soft cloth, wring it out well, and wipe it off.

Afterward, wipe with a soft cloth dampened with water to remove any detergent residue. Finally, gently wipe it with a soft dry cloth and let it dry naturally in the shade.

• Placing tableware directly on the table may scratch the surface, so we recommend using placemats.

Also, if you place an overheated pan on it, it may cause discoloration or deformation, so be sure to use a trivet or appropriate potholder.

Caring for Plastic/Metal Parts

• For daily care, wipe with a dry soft cloth.

- If it gets dirty, use a commercially available cleaner or dilute a weak (3-5%) neutral detergent with lukewarm water (about 30-40°C), soak it in a soft cloth, wring it out and wipe it off. Afterwards, wipe with a soft cloth dampened with water to remove any detergent residue. Finally, gently wipe it with a soft dry cloth and let it dry naturally in the shade.
- The coating on the metal surface is effective in preventing rust caused by scratches. If it gets damaged, it may cause rust or surface peeling even indoors due to humidity, so we recommend that you apply a commercially available rust inhibitor or wax to prevent oxidation.

About insect damage

- If you find insect damage, immediately treat it with insecticide or insect repellent according to the manufacturer's instructions. Insect damage may spread if left unattended.
- For sofas and carpets, we recommend that you frequently vacuum them to reduce the occurrence of dust mites.

In that case, please be careful not to damage the upholstery or carpet with the nozzle of the vacuum cleaner.

About after-sales service

Quality Assurance/Repair

- Please read the contents of the "Warranty" attached to the product and keep it in a safe place.
- When requesting repair, please contact your dealer.

